

## Screw Joint DLW4540 / DLW4550 / DLW4560

Measure the torque of the electric screwdriver by combining with the separately sold Torque Checker DLT1173A.

Screw joint	Electric screwdriver model	Screw fastening type	Joint washer
DLW4540	DLV04C10L	SOFT	White rubber
DLW4550	DLV10C10L		Black rubber
DLW4560	DLV04C / DLV10C10L	HARD	Metal

For details, read the instruction manual for the electric screwdriver.

### ⚠ CAUTION

- If the screw joint is disassembled, use care to ensure that no mistakes are made in the parts order or facing when re-assembling.
- Perform regular checks for damage in the internal thrust bearing.
- Perform regular checks for damage (permanent set in fatigue, cracks, deformation) in the internal rubber joint washer.
- If storing the joint without using it, loosen the hexagon socket head bolt. If stored with torque applied, it could cause deformation in the rubber joint washer.
- Replacement of the joint is recommended every 2,500 measurements, or every 1 year.

