


BELTON B-10N ASSEMBLY AND PARTS LIST

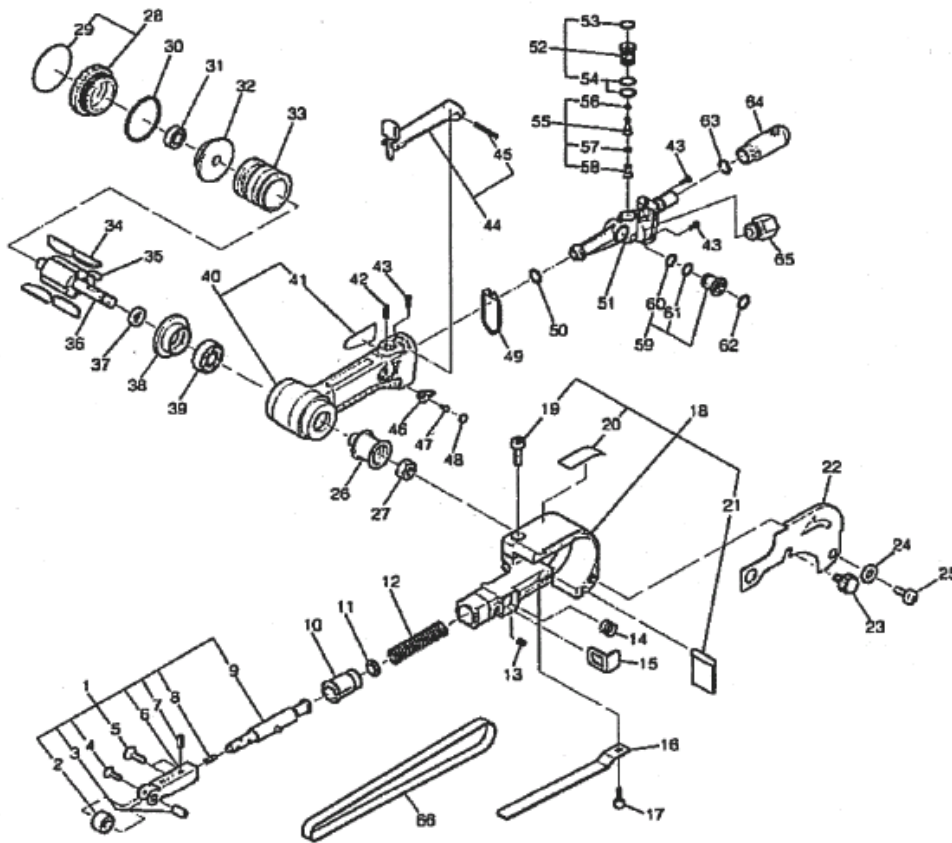

The part numbers with () are included in the Ass'y parts written above them.

No.	Part No.	Part Name	Q'ty
1	TB07233	Bracket 10 Ass'y	1set
2	TA99155	Idle Pulley 10 Sub Ass'y	1set
3	TP12431	Idle Pulley Shaft 10	1
4	TP14455	Countersunk Head Screw 2 x 5	1
5	TQ10725	Hex.Socket Countersunk Head Set Screw 3x6	2
6	TB07898	Bracket 10 Sub Ass'y A	1set
7	TP14798	Spring Pin 3x10 AW	1
8	TQ10526	Tension Bar Spring	1
9	TB07236	Tension Bar Shaft Ass'y	1set
10	TQ07201	Guard Insert	1
11	TQ10934	Stopper	1
12	TQ10724	Spring 1.2x8x4.3x34	1
13	TP15643	Hex.Socket Set Screw 4x4 with Flat Point	1
14	TQ07218	Spring 0.35x7.5x7	1
15	TQ10587	Push Button	1
16	TQ10709	Shoe 10	1
17	TP02618	Pan Head Screw 4x8	1
18	TB07294	Guard Sub Ass'y B	1set
19	(TP08646)	Hex.Socket Head Cap Screw 5x14	1
20	(TP16361)	Label Caution	1
21	(TQ10710)	Dust Cover	1
22	TQ10711	Belt Cover	1
23	TQ10712	Decorative Screw	1
24	TP00144	Washer M4	1
25	TP12819	Pan Head Screw 4x6	1
26	TP14916	Drive Pulley	1
27	TP01924	Hex.Nut M6	1
28	TB07951	Cap Ass'y	1set
29	(TQ11823)	Label Model B-10N	1
30	TP05531	O-ring S-36	1
31	TP06386	Ball Bearing 607ZZ	1
32	TP12414	End Plate A	1
33	TP12415	Cylinder	1
34	TA9A364	Blade Ass'y (4pcs/set)	1set
35	TP10130	Parallel Key Both Ends Round 3x3x10	1
36	TP12416	Rotor	1
37	TP06322	Spacer 8x11x3	1

No.	Part No.	Part Name	Q'ty
38	TP12418	End Plate B	1
39	TP12419	Ball Bearing 628ZZ	1
40	TB07953	Housing Sub Ass'y	1set
41	(TQ11822)	Label Warning	1
42	TQ11559	Parallel Pin 3x14	1
43	TQ11560	Tapping Screw 3x8	3
44	TB07709	Lever Ass'y	1set
45	(TP00460)	Spring Pin 3x22AW	1
46	TQ11554	Adjust Lever	1
47	TP08598	Pan Head Screw 3x5	1
48	TQ11626	Lever Cap	1
49	TQ11555	Packing	1
50	CQ14480	O-ring JASO-1010	1
51	TB08078	Air Inlet Sub Ass'y	1set
52	TB07938	Throttle Valve Ass'y	1set
53	(TP14604)	O-ring S-10	1
54	(TP12569)	O-ring S-11.2	2
55	TB07708	Valve Stem Ass'y	1set
56	(TQ10395)	O-ring SS-2.5	1
57	(TP11994)	O-ring P-4	1
58	(TP03769)	Valve Spring	1
59	TB07937	Adjust Valve Ass'y	1set
60	(CQ25954)	O-ring AS568-012	1
61	(CQ05860)	O-ring AS568-013	1
62	(CP24969)	O-ring JASO-1011	1
63	TP07031	O-ring S-8	1
64	TB08079	Silencer Sub Assy	1set
65	TP00857	Bushing M16xPT 1/4	1

Standard Accessories

No.	Part No.	Part Name	Q'ty
	TP01939	Hex.Socket Screw Key 4	1
	TP13892	Hex.Socket Screw Key 2	1
66	TP16597	Abrasive Belt Z75 #60 x 10	2
	TB00076	Abrasive Belt Z75 #80 x 10	1
	TB00077	Abrasive Belt Z75 #100 x 10	1
	TB00247	Abrasive Belt Z75 #120 x 10	1
	TP02236	Bushing PT1/4 x NPT1/4	1
	TQ11700	Instruction Manual	1