


10. EXPLODED DIAGRAM : MLG-40

⚠ WARNING

This diagram is for your reference only. Do not attempt to service or repair the Tool.
Do not take the Tool apart. Contact an authorized Nitto dealer for all service and repair of the Tool.
Improper service and repair can cause accidents and service injuries.
Never attempt to modify the Tool.
Never attempt service or repair the Tool yourself.

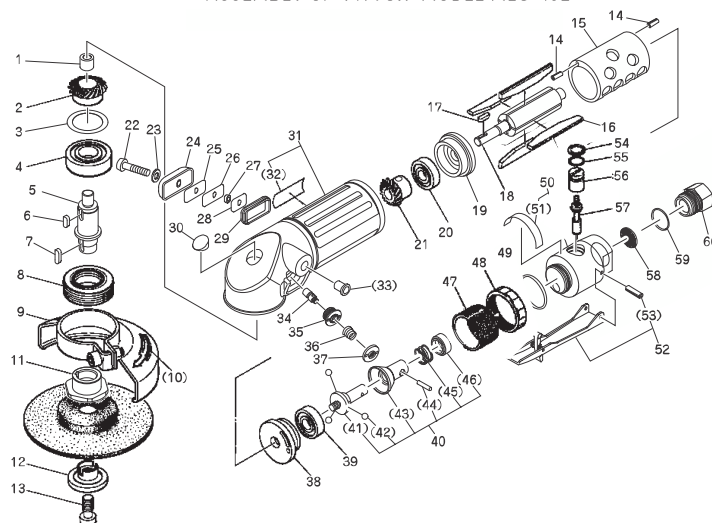

The part numbers with () are included in the As \bar{s} y parts written above them.

No.	PartsNo.	Description	Qty
1	TQ00893	Needle Bearing BK0810	1
2	TQ12725	Gear	1
3	TQ12887	Plate 13.1x30x1.2	1
4	TP01609	Ball Bearing 6202ZZ	1
5	TQ13048	Spindle	1
6	TP00502	Parallel key Both Ends Round 4x4x9.5	1
7	TP09933	Parallel key Both Ends Round 4x4x12	1
8	TB08883	Bearing Set Screw As \bar{s} y	1set
9	TB08918	Wheel Guard As \bar{s} y	1set
10	(TQ02357)	Label Warning for Wheel Guard	1
11	TQ13049	Lock Plate	1
12	TQ00775	Disk Lock	1
13	TP09932	Wheel Lock Bolt	1
14	TP04061	Spring Pin 3x6	2
15	TQ13033	Cylinder	1
16	TB08707	Blade As \bar{s} y(4pcs.)	1set
17	TP10130	Parallel key Both Ends Round 3x3x10	1
18	TQ13032	Rotor	1
19	TQ13030	EndPlate B	1
20	TP10133	Ball Bearing 609ZZ	1
21	TQ12726	Pinion	1
22	TQ12739	Raised Countersunk Head Screw 4x12	1
23	TQ12647	Toothed Washer CW-4	1
24	TQ12729	Exhaust Cover	1
25	TQ13038	Filter Support 40	1
26	TQ13039	Exhaust Filter 40	1
27	TQ13036	Spacer 4.3x8x2.8	1
28	TQ13037	Exhaust Plate	1
29	TQ12730	Packing Cover	1
30	TQ12724	Plug 40	1
31	TB08702	Housing SUB As \bar{s} y	1set
32	(TQ12774)	Label Warning CE Marking	1

No.	PartsNo.	Description	Qty
33	(TQ13074)	Plug 7.2	1
34	TQ12542	Lock Pin	1
35	TQ12537	Pin Guide	1
36	TQ12544	Conical Spring 0.6x7.2x8.8x8	1
37	TQ12543	Lock Button	1
38	TQ13029	EndPlate A	1
39	TQ12782	Ball Bearing 699ZZ	1
40	TB08676	Governor As \bar{s} y	1set
41	(TQ12813)	Base	1
42	(CP03282)	Ball 7/32	3
43	(TQ12067)	Sleeve	1
44	(TQ12090)	Needle Roller 2.5x13.8	1
45	(TQ13035)	Spring 1.4x15.5x16.3	1
46	(TQ12068)	Stopper	1
47	TQ12777	Adapter	1
48	TQ12778	Lock Ring	1
49	TQ12780	O-ring JASO-1033	1
50	TB08704	Valve Body As \bar{s} y	1set
51	(TQ12776)	Label Model	1
52	TB08669	Lever As \bar{s} y	1set
53	(TP13893)	Spring Pin 3x22AW	1
54	TP03473	Internal Retaining Ring C-14	1
55	TP11992	O-ring KS-9	1
56	TP04394	Adjust Valve	1
57	TB05591	Throttle Valve As \bar{s} y	1set
58	TP01658	Filter	1
59	CP25821	O-ring JASO-1020	1
60	TQ12671	Bushing M23xRc3/8	1

Accessories

No.	PartsNo.	Description	Qty
	TP00170	Hex.Socket Screw Key 6	1
	TQ12781	Instruction Manual	1
	TQ02350	Bushing R3/8xNPT3/8	1